

Instructions for Proper installation of Chips for HP 564 & 920 cartridges

1. Locate the chip on the cartridge.
2. Carefully remove the OEM chip
 - a. Place a flat blade under the chip and carefully slide it underneath the OEM for complete removal. **(Image A)**
 - b. Clean any excess debris left behind from the OEM chip.

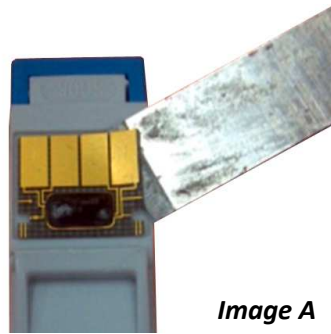


Image A

3. Remove the paper backing from the back of the chip, the adhesive should now be showing. **(image B)**
(Do NOT let adhesive come in contact with hands)
4. Carefully place chip back where the OEM chip once was located. Notice how the contacts of the chip align with the previous OEM alignment. **(Image C)**
 - a. Once in proper location press down to insure proper adhesion to cartridge

Remove paper backing

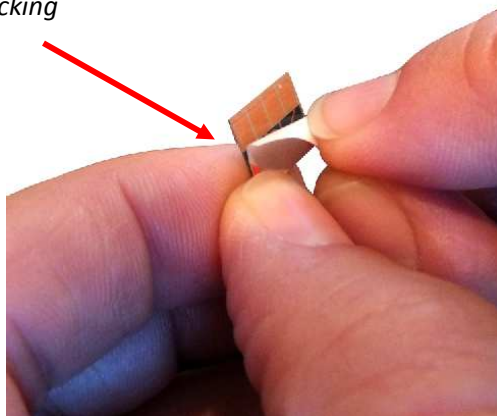


Image B

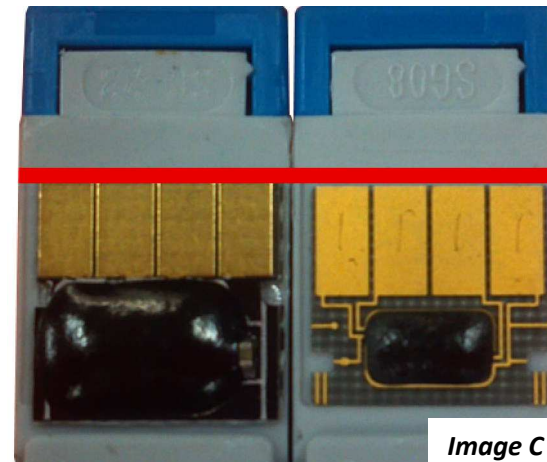


Image C

Do not handle or store chips next to a magnetic source.