

Instructions for Proper installation of Chips for HP 940 cartridges

1. Locate the chip on the cartridge.
2. Carefully remove the OEM chip
 - a. Place a flat blade under the chip and carefully slide it underneath the OEM for complete removal. *(image A)*
 - b. Clean any excess debris left behind from the OEM chip.

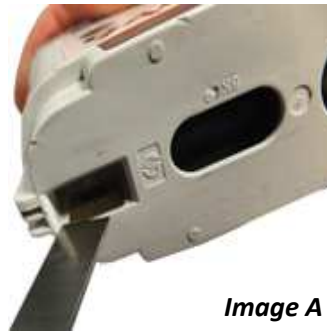


Image A

3. Remove the paper backing from the back of the chip, the adhesive should now be showing. *(image B)*
(Do NOT let adhesive come in contact with hands)
4. Carefully place chip back where the OEM chip once was located.
 - a. Once in proper location press down to insure proper adhesion to cartridge *(image C & D)*

Remove paper backing


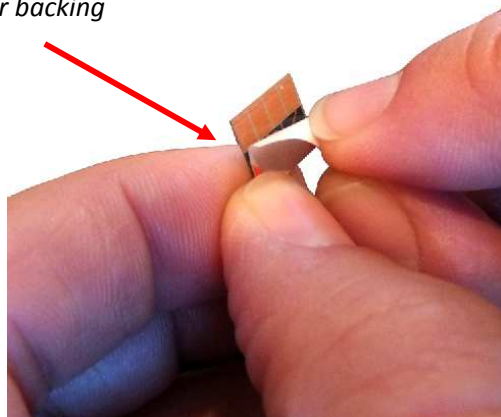


Image B



Image C

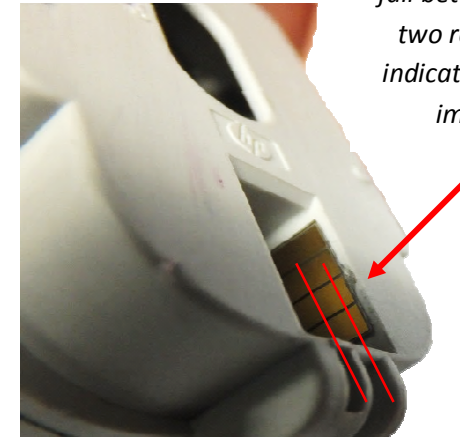

Top of chip must fall between the two red lines indicated in the image

Image D

Do not handle or store chips next to a magnetic source.